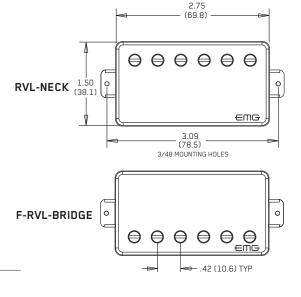



PO BOX 4394 SANTA ROSA, CA 95402 USA

P (707) 525-9941 F (707) 575-7046 EMGPICKUPS.COM

INSTALLATION INFORMATION EMG MODEL: F-REVELATION SET

SPECIFICATIONS:	MODEL:	
	RVL NECK	F-RVL BRIDGE
Logo Color	Gold	Gold
Magnet Type	Alnico 2	Alnico 2
Gauss at Pickup Pole (2x)	250	300
Inductance (Henries)	8.00	7.8
DC Resistance (KOhm)	13.8	13.75
Resonant Frequency (KHz) / Q (1)	3.25/ 1.25	3.41 / 1.38
Impedance at Resonance (KOhm) (1)	78.4	112.5





Notes:

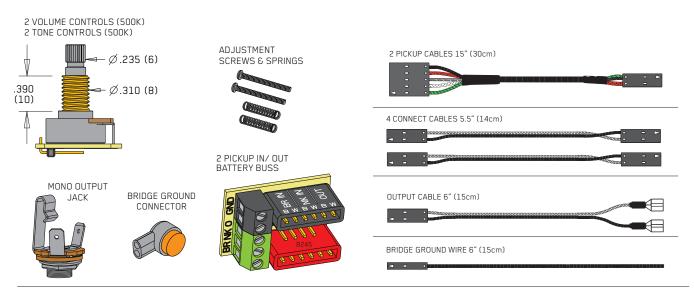
(1) Loaded with 500K Volume and 500K Tone and a 20' (6M) 580pF Cable

INSTALLATION NOTES:

All EMG-Passive Pickups are compatible with each other. The connector system is an easy method of installation, avoiding the need to solder. EMG Accessory Circuits like the VLPF, EXG, SPC or RPC Controls can be added to any EMG Passive System. All EMG Accessory circuits have buffered inputs and can be used on either passive or active pickups.

SPECIAL NOTE: The Red Wire of the HZ Pickup is NOT for battery power, it is a coil wire.

INCLUDED IN THE F-REVELATION SET:



WARRANTY

All EMG Pickups and accessories are warranted for a period of two years. This warranty does not cover failure due to improper installation, abuse or damage. If upon examination the pickup is determined to be defective, a replacement will be made. Warranty replacement products are covered by this same warranty. This warranty covers only those pickups and accessories sold by authorized EMG Dealers. This warranty is not transferable.

Installation Instructions: EMG Models: F-REVELATION SET

General Notes:

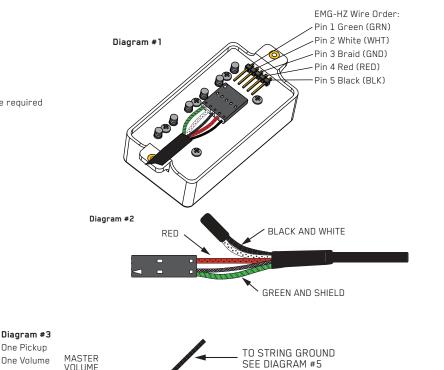
Every attempt has been made to make this a solderless installation. There are some instances where this is not possible;

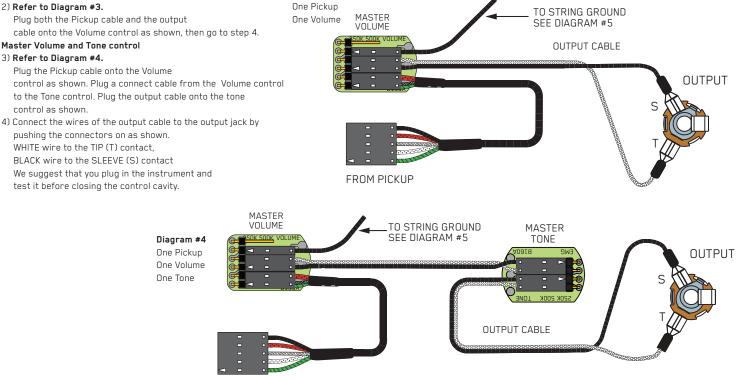
- 1) If your instrument uses the long panel output jack, soldering will be required 2) Instruments with two pickups may need soldering to the selection switch in some installations.
- If you are installing only one pickup use the instructions on this page. If you are installing two pickups go to page 3 and begin there.

Installation (One Pickup Guitars):

Master Volume control only

1) Plug the pickup cable onto the EMG Pickup header as shown in Diagram #1 and route the cable to the control cavity. If the cable is too long, wind up the excess and keep it under the pickup or in the control cavity if possible. Diagram #2 shows the factory pre-wired cable. The Green wire and shield are pre-wired to Pin 1 and the Red wire is pre-wired to Pin 2. The Red wire is the signal output from the pickup. The White and Black wires are wired together and covered with shrink tubing. This is standard humbucking series wiring.





Attaching the bridge ground wire

BLACK WIRE INCLUDED STRING GROUND WIRE Diagram #5 6) Refer to Diagram #5. NECK COMING FROM THE BRIDGE WITH CONNECTOR As mentioned on page 1, it is common to "ground" (earth) **VOLUME** the strings on guitars that have passive pickups. Included with the system is a black wire with a single black 2 3 4 5 connector attached. Also included is an IDC connector for connecting the two wires together. Insert the bridge ground wire, 6 and the connector wire into the IDC connector, crimp the connector with a pair of pliers until it snaps and this will connect the two wires. CLOSED CRIMP You don't need to strip the insulation from the wires. (INSERT WIRES) Push the black connector onto terminal 2 (GND) of the volume control as shown in the diagram. This will ground the strings to the system.

FROM PICKUP

Installation Instructions:

EMG Models: F-REVELATION SET

Installation (Two Pickup Guitars with Selection switch): Guitars with two pickups and a selection switch will use the EMG B245 Pickup Buss. The Pickup Buss is a convenient way to wire your guitar without soldering. Since you are installing passive $\mathsf{EMG}\mathsf{-HZ}$ Pickups the RED Shroud of the B245 Pickups Buss will not be used. It is for battery power.

2 Pickups / Toggle Select Switch / Master Volume and Tone

1) Install the Pickups and route the Pickup cables to the control cavity.

If the cables are too long, wind up the excess and keep it under the pickup. Refer to Diagram #6a

Mount the Volume and Tone controls into the body.

Plug both Pickup cables onto the Pickup Buss (BLACK Shroud) as shown, Bridge Pickup to BR IN. Neck Pickup to NK IN.

3) Plug a connect cable from the Pickup Buss (OUT) to the Master Volume control as shown in Diagram #6b.

4) Plug a connect cable from the Master Volume to the Master Tone as shown. 5) If using the EMG solderless 3 way toggle refer to **Diagram #7a**. If using a hardwired 3 way blade or lever switch see Diagram #7b.

6) Strip the insulation from the switch wires on your stock switch and Insert them into the GREEN Terminal Block and tighten the screws with a small screwdriver.

The Bridge pickup goes to the BR Terminal

The Neck pickup goes to the NK Terminal

The Output of the switch goes to the O Terminal

If there is a ground wire coming from the switch, insert it into one of the black terminals on the terminal block. As shown in Diagram #6b.

7) Plug the output cable onto the Master Tone control and connect the output wires to the output jack by pushing the connectors on as shown.


WHITE wire onto the TIP (T) contact,

BLACK wire onto the SLEEVE (S) contact

We suggest that you plug in the instrument and test it before closing the control cavity.

****Tips and Tricks**** Start your installation by: 1) Removing the strings 2) Remove any existing Pickups and controls (remember the order and function of each control) 3) Determine a good spot for the Pickup Buss and make sure the cable or wires from the selection switch will reach the Pickup Buss, 4) Install the EMG Volume and Tone Controls and tighten them in.

5) Then install the pickups keeping any excess cable under the pickup rather than in the control cavity.

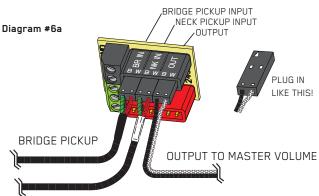



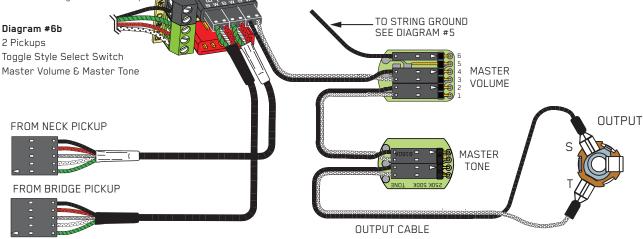


Diagram #7a

Connecting to the B289 3 Way Toggle:

Install the 4 pin Connector housing on the switch as shown in the diagram below. Install both of the 2 pin connectors on to the 4 pin connector between the black and red housings as shown. The black and green terminal blocks will not be used for the switch.

For more details you can refer to the B289 Instructions.

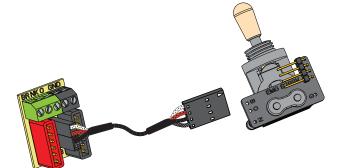


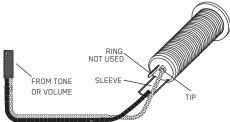


Diagram #7b


2 Pickups

Diagram #7c Soldering to the 152B Panel Jack:

If your instrument has a long Panel Jack like the one below you will have to solder the output cable as shown. Ground (Black) to the Sleeve Signal (White) to the Tip Battery Negative (Black) to the Ring



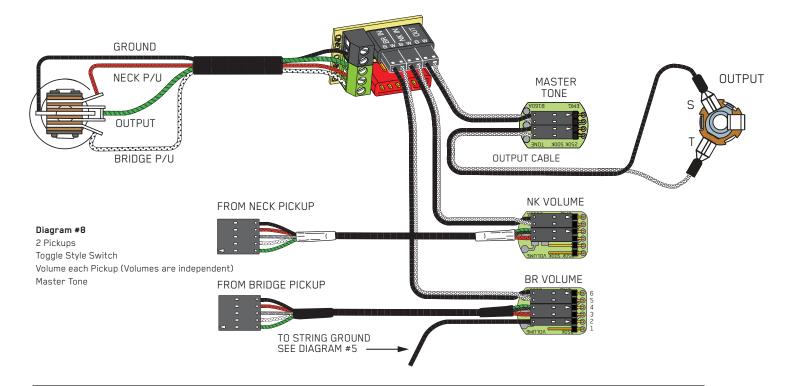F-REVELATION SET INSTRUCTIONS Page 3



2 Pickups / Toggle Select Switch / 2 Volumes and 2 Tones) Refer to Diagram #9

- 1) Install the Pickups and route the cables to the control cavity.
- If the cables are too long, wind up the excess and keep it under the pickup. 2) Mount the Volume and Tone controls into the body
- Plug both Neck and Bridge pickup cables onto the Volume Controls as shown. Plug a connect cable from the Bridge (BR) Volume control to the Pickup Buss (Position 1).

 $\mathsf{Plug}\xspace$ a connect cable from the Neck (NK) Volume control to the Pickup Buss (Position 2).

- 3) Plug a connect cable from the Bridge (BR) Volume control to the Bridge (BR) Tone control as shown.
- Plug a connect cable from the Neck (NK) Volume control to the Neck (NK) Tone control as shown.
- 5) Strip the insulation from the switch wires and Insert them into the GREEN Terminal Block and tighten the screws with a small screwdriver.
 - The Bridge pickup goes to the BR Terminal
 - The Neck Pickup goes to the NK Terminal
 - The Output of the switch goes to the O Terminal
- If there is a ground wire coming from the switch, insert it into one of the black terminals on the terminal block.
- 6) Plug the output cable onto the Pickup Buss (Position 3) and push the connectors onto the jack as shown.
- WHITE wire onto the TIP (T) contact,
- BLACK wire onto the SLEEVE (S) contact
- We suggest that you plug in the instrument and test it before closing the control cavity.

